

# toro ecx timer manual

## Timer Components

### 3 - Control Dial Positions (continued)

- SEASON ADJUST** – Selects the Season Adjust feature. See page 31 for details.
- OFF** – Shuts off and prevents all automatic and manual watering activity. See page 30 for details.
- RAIN DELAY** – Selects the Rain Delay feature. See page 30 for details.
- 4 - Optional 12/24-Hour Clock Feature** – Removing this jumper selects 24-hour (military time) clock mode.
- 5 - Optional Run Delay Feature** – Removing this jumper causes a 15-second delay period before a zone starts watering.
- 6 - Odd/Even Day Schedule Selector Feature** – Removing this jumper enables an Odd or Even watering day schedule to be selected.
- 7 - Transformer** – Supplies 24 V a.c. power to the timer.
- 8 - Fuse** – 0.75 Amp, 250V Fast Blow fuse.
- 9 - Terminal Block** – Input power wire connection terminals.
- 10 - Sensor Connection Terminals** – Snap-in connectors for optional Toro Rain Switch control wires.
- 11 - Valve Common Terminal** – Snap-in connector for the valve common wire.

### 12 - Pump/Master Valve Connection Terminal

- Snap-in connector for the power wire from the pump start relay or master valve.
- 13 - Sensor Bypass Switch** – Controls input from the optional Toro Rain Switch (if installed).
- 14 - Battery Select Switch** – Alkaline (ALK) and recharge (RCHG) position to select the type of battery installed.
- 15 - Plug-In Zone Control Module** – Each control module has snap-in connectors for two valve power wires. Up to six modules can be installed to control up to 12 valves.
- 16 - Program Select Switch** – Three position slide switch used to select watering program A, B or C during the programming procedures and manual operation.
- 17 - 9-Volt Battery** – The battery maintains the timer memory if the main power is disconnected. Either an Alkaline or rechargeable Ni-MH battery can be installed.

29 Mar - 2 min - Uploaded by rayvan23 Irrigation timer There is a part two, which is how to test manually. fotografosacfa.com be46ttw\_jBw.View and Download Toro ECx user manual online. Automatic Sprinkler System Timer. ECx Lawn and Garden Equipment pdf manual download.Toro ECx Manual Online: Setting Program Start Times. Turn the Automatic outdoor sprinkler timer. . Timer Toro Installation & Programming Manual.ECx T imer User Guide. Automatic Sprinkler Control Timer. Click Here For Quick Reference Guide .. The Toro Rain Switch interrupts watering during rain. 1.The Toro ECx is a series four-sprinkler timer management units designed for use in residential yard settings. The product series has options for four, six or eight.Toro ECX Controller Manual - download the manual for your Toro ECX. If you have any questions please call Think Water Auckland / Auckland Irrigation.MANUAL. START. ON. NEXT. OFF. Automatic Sprinkler. System Control Timer. User's Guide .. Note: The ECXTRA indoor timer is not weather resis- tant and.Three modes of operation - automatic, manual station and manual program. Used toro ecx sprinkler timer. Toro ECx Water Sprinkler Timer Controller Unit.Toro Users Guide Automatic Outdoor Sprinkler Timer ECx Owners Manual I don't know how to place specific sprinkler stations and specific timer programs.View and download toro ecx user manual online automatic sprinkler system timer ecx lawn and garden equipment pdf manual download turn the ecx unit on by.Fri, 27 Jul GMT toro extra user manual pdf - View and. Download Toro ECXTRA. Sprinkler Timer user manual online. with.tors for optional Toro Rain Switch control wires. 11 - Valve 5. BATTERY. MANUAL. START. ON. NEXT. OFF. PROGRAMS. B C. A. Timer Components. 3. 4 . 5. 7."TORO" 6 ZONE SPRINKLER TIMER Toro ECXTRA Timers take the mystery out of watering . The timer can be programmed using a USB module or manually.View and download toro ecx user manual online automatic outdoor sprinkler timer ecx timer pdf manual download amazoncom toro lawn master ii 6 zone.Turn the dial to time/date, the hour will flash, press the plus or the minus to increase or decrease the hour. 2. Press next to program the minutes. 3. Press the next.light-commercial applications. Your new Toro TMC controller features: Flexible Station Count from 2 to 12 Stations with. 2-station Expansion modules.

[\[PDF\] electrolux gazelle instructions](#)

[\[PDF\] brother hl2150n printer](#)

[\[PDF\] samsung sp-r4232 plasma tv](#)

[\[PDF\] dell a225 review](#)

[\[PDF\] logitech z 5500 remote](#)

[\[PDF\] fluke 51 ii digital thermometer](#)

[\[PDF\] mac open rar without password](#)